

4-Poster Bed with Sandia, El Paso, or Mission Headboard Assembly Instructions

Dave Cady's **NOMAD FURNITURE**
Albuquerque, NM www.nomadfurniture.com 505-250-5231

Tools needed for assembly

A phillips screwdriver
Rubber mallet or hammer w/block included
Optional: one friend

Bed parts list

2 long bed legs-headboard
2 long bed legs-footboard
2 crosspieces with small holes
2 crosspieces with large holes or
Slots (for dowels or slats)
2-top crosspieces with no holes
2-side rails with ledgers
2-top side rails
½" dowels or slats
1-center support
1 strapped slat roll
4-5/8" shoulder screws
2-1" screws (for slats)

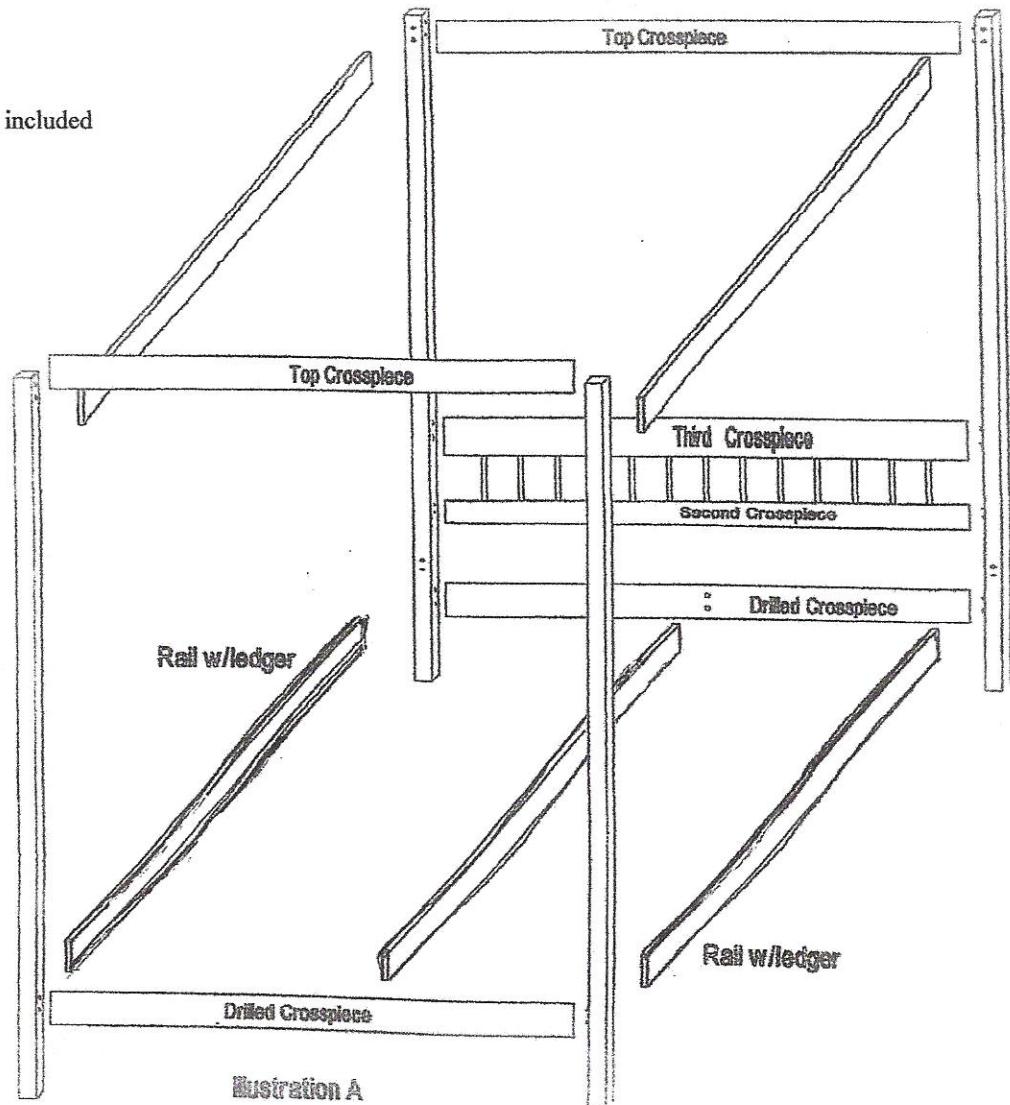



Illustration A

Headboard Assembly

1. If possible, go to this site for photo slides of assembly NOMADFURNITURE.COM/BED-ASSEMBLY-GALLERY/
 2. Identify all pieces before beginning. Lay out parts as shown in **Illustration B**.
- Note:** To protect the wood only use a hammer with the wood block in shipping box as a pad, to tap down parts. Or a rubber mallet works nicely with a baggie over the mallet (no black marks). Lay parts out on carpet if possible.
3. Prop up third crosspiece (between books?) so holes or slots are on top and connectors on ends open up.
 4. Insert dowels or slats into the crosspiece. For the El Paso put the two shortest dowels in end holes.
 5. Hold the second crosspiece with the holes or slots facing down over the dowels/slats.
 6. Starting at the right end, insert the first dowel or slat into the first hole. Slip rubber band over the right ends as shown in Illustration B.
 7. Continue fro right to left inserting one dowel or slat at a time until all dowels or slats are inserted. Slip second rubber band over left end to hold the crosspieces, thus trapping the dowels or slats.
 8. Turn ofe completed unit and connect to headboard leg, ends should be pushed down over pins, then gently tapping top of assembly down until sung.

9. Add lower crosspiece to the same leg and tap down snug.
 10. Attach all the crosspieces simultaneously to the other headboard leg using the 1/2" spacer to help. Tap down snug.
- Note:** It is important that all joints are tapped down completely.
11. Cut rubber bands when completely connected.
 12. Spread the top of the legs and attach the top crosspiece between the legs.

Illustration B

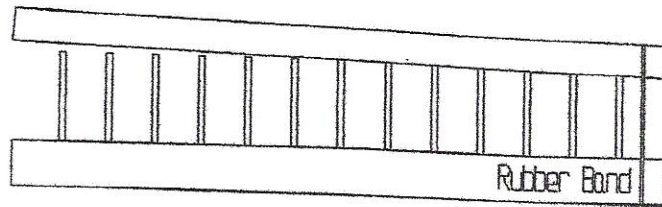

Bed Frame Assembly

1. **Note:** When attaching crosspieces to shoulder screws on legs; the top shoulder screw should be located in the center of the crosspiece. Be careful not to put the shoulder screw above the end metal in the crosspiece or damage can occur when tapping down. Refer to our "CAUTION SHEET"
2. Assemble footboard as shown in Illustration A. Be sure to attach drilled crosspiece to LOWER set of shoulder screws.
3. Attach top crosspiece to foot legs.
4. Tap down crosspieces using rubber mallet (or hammer with wood block) to make sure all joints are snug.

Note: When connecting rails and crosspieces to legs, rail ends should be pushed down over shoulder screws.

3. Install four 5/8" shoulder screws into predrilled holes in the two lower crosspieces.
 4. Attach headboard to footboard (after you assemble the headboard Illustration B) using the two side rails.
 5. Attach the center support rail to the head and footboard lower crosspieces (it will be tight).
 6. Tap down rails and center support until snug
 7. Attach top side rails as shown in Illustration A.
- Note:** It is important that all joints are tapped down completely.
8. Install four 5/16" X 1" wood pins in holes in side rail ledges.
 9. Lay out slat roll, strap up, so that end slats overlap pins.
 10. **Important:** Screw center slat tight to side rail ledge using two 1" screws. Make sure the slat is tight against the side rail. Failure to screw down center slat may cause damage to the bed.

Optional Extra Bed Footboard Instructions

1. Layout and identify parts
2. Important: Check that the crosspiece with shoulder screws holes and holes for dowels are the bottom footboard piece.
3. Assemble unit as in Illustration B.
4. Install into footboard as a unit. Tap down on top crosspiece until snug.

Optional Y-Blocks

1. Locate Y shaped support blocks with screws.
2. After bed is assembled screw Y blocks to middle of center supports using the screws provided.
3. Make sure support block is tight to the center support.

Dave Cady's Nomad Furniture Limited Warranty

Nomad Furniture guarantees all of our products to be free of defects in materials or craftsmanship. During the first 60 days most problems will be evident. Call your retailer or Nomad Furniture for return instructions and we will pay the freight. After 60 days of normal use simply return any part that is defective and we will repair or replace it at no cost to the original owner for 5 years.