

# Pecos / Pecos Lite Bed Assembly Instructions

Dave Cady's **NOMAD FURNITURE**

Albuquerque, NM [www.nomadfurniture.com](http://www.nomadfurniture.com) 505-250-5231

## Tools needed for assembly

A phillips screwdriver  
 Rubber mallet or hammer w/block included  
 Optional: one friend


## Bed parts list

2 short legs with shoulder screws  
 2 long bed legs-headboard  
 3 crosspieces (2 with predrilled holes)  
 2-side rails with ledgers  
 1-center support (2 for King size)  
 1 strapped slat roll  
 4-5/8" shoulder screws  
 4-5/16"x1" wood pins (ledgers)  
 2 1" screws (for slats)

## Pecos (only) Extra Footboard Option:

1 more Crosspiece With 2-longer legs

Pecos Lite has 4-short legs and  
 only 2-crosspieces with holes

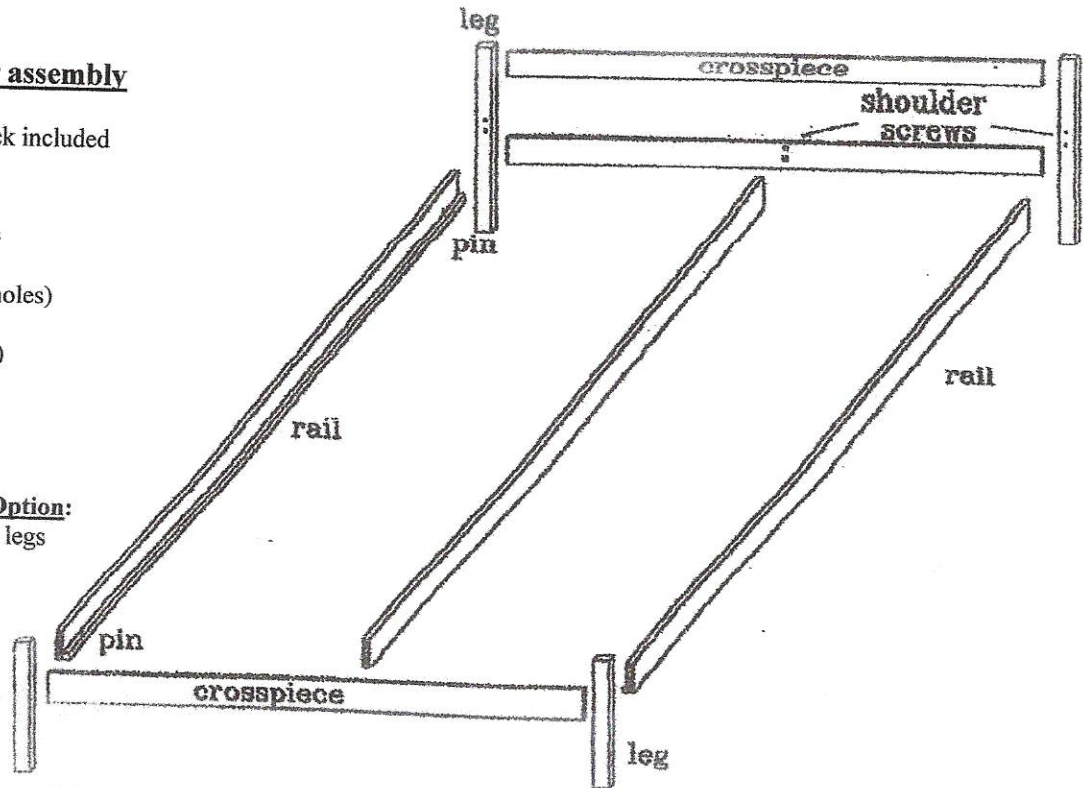

## **Bed Assembly ( Illustration of Pecos Bed)**

1. If possible, go to this site for photo slides of assembly [HTTP://NOMADFURNITURE.COM/BED-ASSEMBLY-GALLERY/](http://nomadfurniture.com/bed-assembly-gallery/)
2. Identify all pieces before beginning. Lay out parts as shown in diagram above.

**Note:** To protect the wood only use a hammer with the wood block in shipping box as a pad, to tap down parts. Or a rubber mallet works nicely with a baggie over the mallet (no black marks).

3. Assemble headboard and footboard. For footboard: Use **LOWER** shoulder screws for crosspiece.
4. Attach both crosspieces to one leg then attach to the other leg.

**Note:** When attaching crosspieces to shoulder screws on legs; the top shoulder screw should be located in the center of the crosspiece. Refer to our "CAUTION SHEET."

5. Install 4-5/8" shoulder screws into predrilled holes on headboard and footboard crosspieces.
6. Attach headboard to footboard using the two side rails with ledger inside.
7. Attach the center support rail (it will be tight).
7. Tap down rails and center support until snug.

**Note:** It is important that all joints are tapped down completely.

8. Install 4- 5/16" x 1" wood pins in holes in side rail ledgers.
8. Lay out slat roll, strap up, so that end slats overlap wood pins.

**Important:** Screw center slat tight to side rail ledge using 2-1" screws. Make sure the slat is tight against the side rail. Failure to screw down center slat may cause damage to the bed.

### *Dave Cady's Nomad Furniture Limited Warranty*

Nomad Furniture guarantees all of our products to be free of defects in materials or craftsmanship. During the first 60 days most problems will be evident. Call your retailer or Nomad Furniture for return instructions and we will pay the freight. After 60 days of normal use simply return any part that is defective and we will repair or replace it at no cost to the original owner for 5 years.