

Ranch, Sandia, El Paso, or Mission **Bed Assembly Instructions**

Dave Cady's NOMAD FURNITURE

Albuquerque, NM www.nomadfurniture.com 505-250-5231

Tools needed for assembly

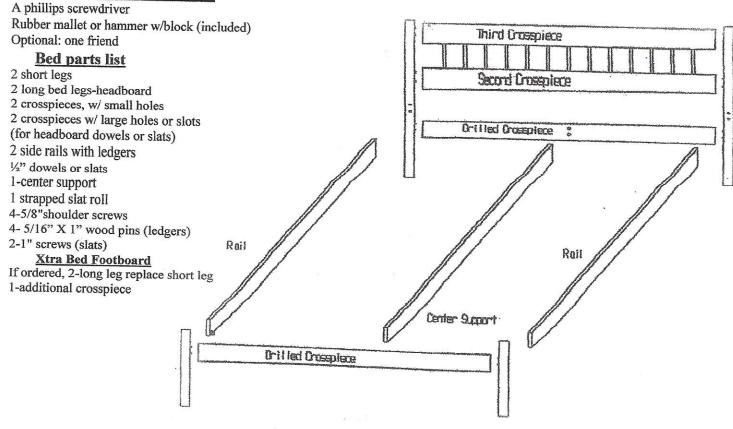


Illustration A

HeadboardAssembly (Illustration B-page 2)

1. If possible go to web site and review slides at NOMADFURNITURE.COM/BED-ASSEMBLY-GALLERY/ Identify all pieces before beginning. Lay out parts as shown.

Note: To protect the wood only use a hammer with the wood block (in shipping box) as a pad to tap down parts. Or a rubber mallet works nicely with a baggie over the mallet (no black marks on wood). See Caution Sheet.


Prop up third crosspiece so holes or slots are on top and connectors are on ends open up.

Insert dowels or slats into the crosspiece. For the El Paso put the shortest dowels in the end holes.

Hold the second crosspiece with the holes or slots facing down over the dowels/slats.

- Starting at the right end, insert the first dowel/slat at a time until all dowels/slats are inserted. Slip rubber band over right end to hold the crosspieces, see Illustration B.
- Continue from right to left inserting one dowel/slat at a time until all dowels/slats are inserted. Slip second rubber band over left end to hold the crosspieces, thus trapping the dowels/slats.
- Turn over completed unit and connect to headboard leg, gently tapping top of headboard assembly down until snug. Note: When connecting rails and crosspieces to legs, rail ends should be pushed down over pins. See our CAUTION SHEET. It is important that all connections are tapped down securely or damage may occure to bed. 10. Add lower crosspiece to the same leg and tap down snug.
- 11. Cut rubber bands when completely connected.

Illustration B



Bed Frame Assembly (Illustration A- page 1)

- Assemble footboard as shown. Use LOWER shoulder screws for crosspiece.
- Tap down on crosspieces, making sure all joints are snug.

Note: When connecting rails and crosspieces to legs, rail ends should be pushed down over shoulder screws. See Caution 3.

- Install four 5/8" shoulder screws into predrilled holes on headboard and footboard crosspieces.
- Attach headboard to footboard (after you assemble the headboard Illustration B) using the two side rails. 4. 5.
- Attach the center support rail (it will be tight).
- Tap down rails and center support until snug.

Note: It is important that all joints are tapped down completely.

- Install four 5/16" X 1" wood pins in holes in side rail ledges.
- Lay out slat roll, strap up, so that end slats overlap pins.


Important: Screw center slat tight to side rail ledge using two 1" screws. Make sure the slat is tight against the side rail. Failure to screw down center slat may cause damage to the bed,

Optional Extra Bed Footboard Instructions (Illustration C)

- 1. Layout and identify parts.
- Important: Check that the crosspiece with shoulder screws holes and holes or slots for dowels/slats are the bottom
- Assemble unit as in Illustration B.
- Install footboard as a unit onto legs.

King Bed Options ONLY

- 1. Locate 2 Y shaped support blocks with screws.
- 2. After bed is assembled screw Y blocks to middle of center supports using the screws provided.
- 3. Make sure support block is tight to the center support.

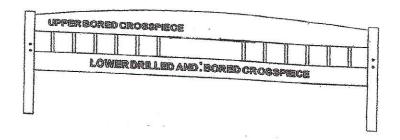

Hustration C

Dave Cady's Nomad Furniture Limited Warranty

Nomad Furniture guarantees all of our products to be free of defects in materials or craftsmanship. During the first 60 days most problems will be evident. Call your retailer or Nomad Furniture for return instructions and we will pay the freight. After 60 days of normal use simply return any part that is defective and we will repair or replace it at no cost to the original owner for 5 years.