

# Taos Sleigh Bed Assembly Instructions

Dave Cady's **NOMAD FURNITURE**


Albuquerque, NM [www.nomadfurniture.com](http://www.nomadfurniture.com) 505-250-5231

## Tools needed for assembly

A phillips screwdriver  
 Rubber mallet or hammer w/block (included)  
 Optional: one friend

## Bed parts list

2 short legs  
 2 long bed legs  
 3 crosspieces, (2 drilled, 1 narrow)  
 2 large dowels  
 2 side rails with ledgers  
 1 center support rail  
 1 strapped slat roll  
 4-5/8" shoulder screws  
 4-5/16" X 1" wood pins (ledgers)  
 2-1" screws (slats)

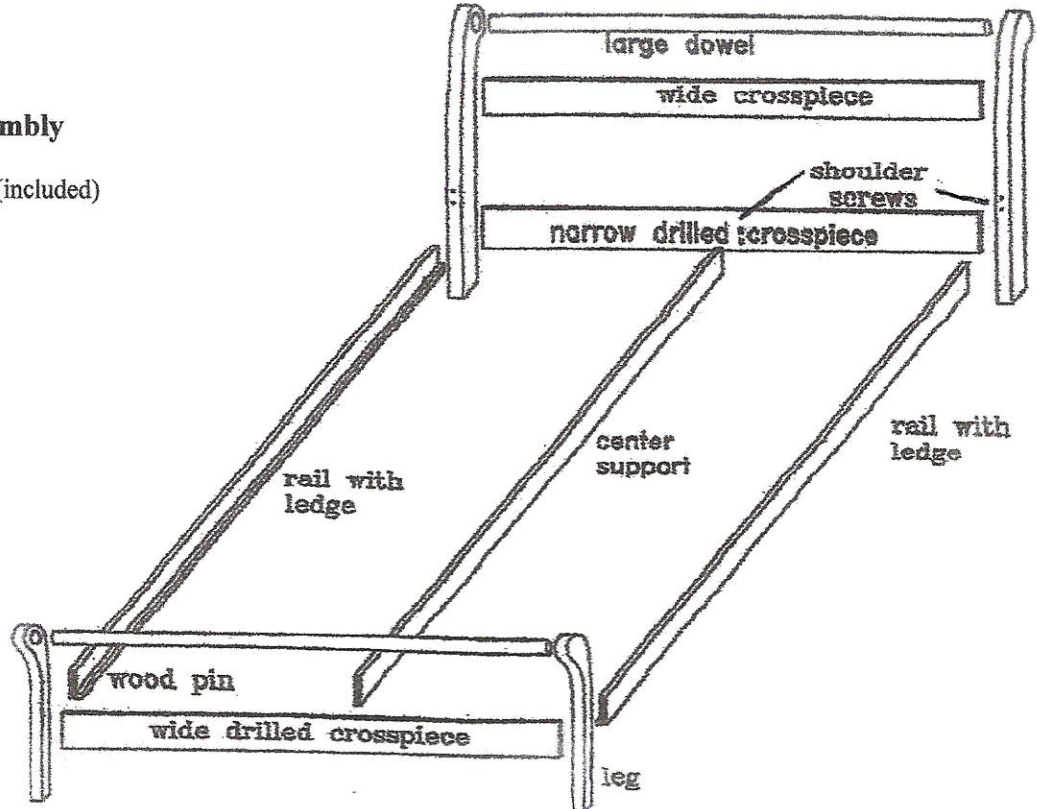

## Bed Frame Assembly

1. If possible view picture slides prior to assembly. [NOMADFURNITURE.COM/BED-ASSEMBLY-GALLERY/](http://NOMADFURNITURE.COM/BED-ASSEMBLY-GALLERY/)
2. Identify all pieces before beginning. Lay out parts as shown. To protect the wood only use a hammer with the wood block in shipping box as a pad, to tap down parts. Or a rubber mallet works nicely with a baggie over the mallet (no black marks).  
**Note: When attaching crosspieces to shoulder screws on legs; the top shoulder screw should be located in the center of the crosspiece. Refer to our "CAUTION SHEET."**
3. Assemble headboard by connecting both crosspieces to one long leg and insert large dowel before connecting crosspieces to the other leg. Assemble the footboard in likewise manner.  
**Note: When connecting rails and crosspieces to legs, rail ends should be pushed down over shoulder screws see Caution Sheet.**
3. Tap down on crosspieces using rubber mallet to make sure joints are snug.
4. Attach headboard to footboard using the two side rails.
5. Install four 5/8" shoulder screws into predrilled holes on headboard and footboard crosspieces.
6. Attach the center support rail (it will be tight).
7. Tap down rails until snug.  
**Note: It is important that all joints are tapped down completely.**
8. Install four 5/16" X 1" wood pins in holes in side rail ledgers.
9. Lay out slat roll, strap up, so that end slats overlap pins.
10. **Important:** Screw center slat tight to side rail ledge using two 1" screws. Make sure the slat is tight against the side rail. Failure to screw down center slat may cause damage to the bed.

### Dave Cady's Nomad Furniture Limited Warranty

Nomad Furniture guarantees all of our products to be free of defects in materials or craftsmanship. During the first 60 days most problems will be evident. Call your retailer or Nomad Furniture for return instructions and we will pay the freight. After 60 days of normal use simply return any part that is defective and we will repair or replace it at no cost to the original owner for 5 years.