

## Vista or Vista Mesa Bed Assembly Instructions

Dave Cady's **NOMAD FURNITURE**  
Albuquerque, NM [www.nomadfurniture.com](http://www.nomadfurniture.com) 505-250-5231

### Tools needed for assembly


A phillips screwdriver  
Rubber mallet or hammer w/block included  
Optional: one friend

### Bed parts list

2-short legs with shoulder screws  
2-long bed legs-headboard  
2-crosspieces, with holes  
1-Vista or Vista Mesa panel with screws  
2-side rails with ledgers  
1-center support (2 for King size)  
1 strapped slat roll  
4-5/8" shoulder screws  
4-5/16"x1" wood pins (ledgers)  
2-1" screws (for slats)

### Extra Footboard Option:

Add 1 more Crosspiece w/longer legs

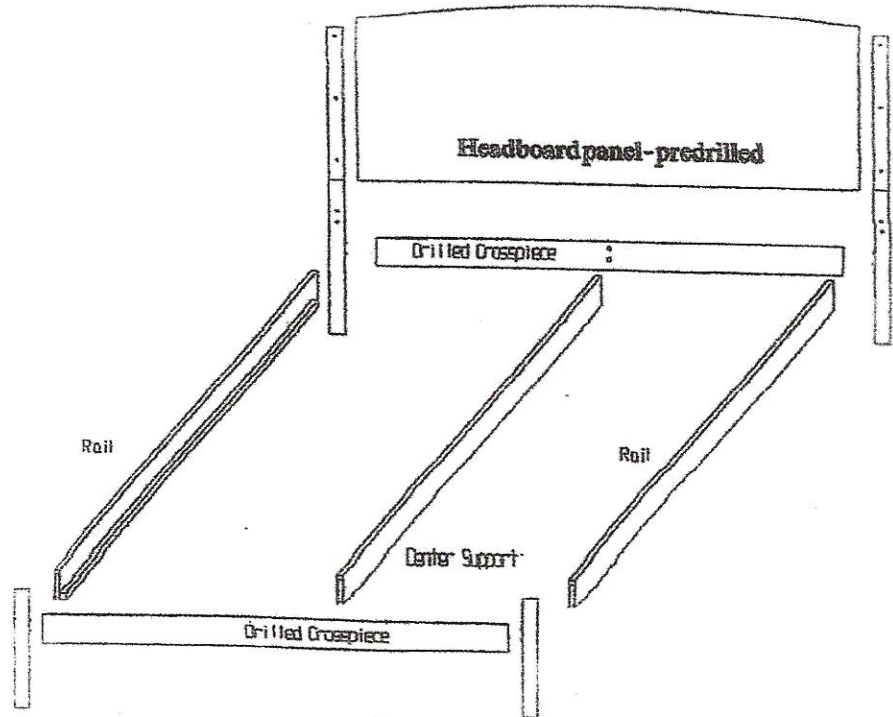

### Bed Frame Assembly

1. If possible, go to this site for photo slides of assembly [HTTP://NOMADFURNITURE.COM/BED-ASSEMBLY-GALLERY/](http://NOMADFURNITURE.COM/BED-ASSEMBLY-GALLERY/)

2. Identify all pieces before beginning. Lay out parts as shown in diagram

**Note:** To protect the wood only use a hammer with the wood block in shipping box as a pad, to tap down parts. Or a rubber mallet works nicely with a baggie over the mallet (no black marks).

3. Attach 2 long legs using crosspiece. Push crosspiece down over screws and tap down snug.

**Note:** When attaching crosspieces to shoulder screws on legs; the top shoulder screw should be located in the center of the crosspiece. Refer to our "CAUTION SHEET."

4. Lay the Vista or Vista Mesa panel flat on the carpet and attach the panel back to the long legs, from the back, using 1-5/8" screws into the predrilled holes.

5. Assemble footboard. Use the LOWER PINS (screws) for the crosspiece. See Caution above.

6. Install 4-5/8" shoulder screws into predrilled holes on headboard and footboard crosspieces. Insert dowels into the crosspieces.

7. Tap down on crosspieces using rubber mallet to make sure joints are snug.

8. Attach headboard to footboard using the two side rails ledgers.

9. Attach the center support rail (it will be tight).

**Note:** When connecting side rails and crosspieces to legs, rail ends should be pushed down over pins and tapped snug.

10. Install 4-5/16" x 1" wood pins in holes in side rail with ledgers.

11. Lay out slat roll, strap up, so that the end slats overlap wood pins.

**Important:** Screw center slat tight to the side rail ledger using 2-1" screws.

### *Dave Cady's Nomad Furniture Limited Warranty*

Nomad Furniture guarantees all of our products to be free of defects in materials or craftsmanship. During the first 60 days most problems will be evident. Call your retailer or Nomad Furniture for return instructions and we will pay the freight. After 60 days of normal use simply return any part that is defective and we will repair or replace it at no cost to the original owner for 5 years.